



# KD-X561DBT KD-X560BT

DIGITAL MEDIA RECEIVER  
**INSTRUCTION MANUAL**

JVCKENWOOD Corporation

- Updated information (the latest Instruction Manual, etc.) is available from  
<<http://www.jvc.net/cs/car/>>.



# Contents

Before use .....	2
Precautions .....	2
How to read this manual .....	2
Getting Started .....	3
Initial settings .....	3
Clock settings .....	3
Basics .....	4
Common operations .....	4
How to attach/detach the faceplate .....	4
Select a source .....	4
USB .....	5
Preparation .....	5
Playback operations .....	5
Function settings .....	6
iPod/iPhone .....	7
Preparation .....	7
Playback operations .....	7
Function settings .....	7
Tuner .....	8
Tuner basic operations .....	8
Tuner function settings .....	9
DAB (KD-X561DBT) .....	10
DAB Basic Operation .....	10
DAB function settings .....	10
External Components .....	11
Using external audio players .....	11
Rear view camera .....	11
Bluetooth® smartphone .....	12
Register your smartphone to the unit .....	12
Receive a call .....	12
Make a phone call .....	13
Playing Bluetooth Audio Device .....	13
Function settings .....	14
Setup .....	14
Settings .....	14
Sound settings .....	15
Remote control .....	16
Functions of the remote control buttons .....	16
Installation .....	17
Before installation .....	17
Installing the unit .....	18
About this Unit .....	21
Maintenance .....	21
More information .....	21
Troubleshooting .....	22
Specifications .....	23
Copyrights .....	24

# Before use

## Precautions

### ▲WARNING

#### ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your JVC dealer.

#### ■ Precautions on using this unit


- When you purchase optional accessories, check with your JVC dealer to make sure that they work with your model and in your area.
- The Radio Data System or Radio Broadcast Data System feature won't work where the service is not supported by any broadcasting station.

#### ■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ballpoint pen or similar tool with the sharp tip.

#### ■ How to reset your unit

If the unit or the connected unit fails to operate properly, reset the unit.

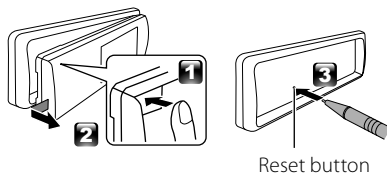


## How to read this manual

- The panels shown in this guide are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual panels.
- In operation procedures, bracket shape indicates the item you should control.  
[    ]: indicates the selected items or menu.  
< >: indicates the name of panel buttons.
- **Display language:** English is used for the purpose of explanation. You can select a display language from the [Language] menu. See **Language (P.14)**.

# Getting Started

## Initial settings

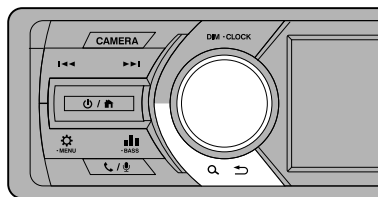

- 1 Turn the ignition key of your car to ACC.  
The unit is turned on.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.



### Language

Select the language used for the control screen and setting items. Default is "English".

### Area

**EUROPE (Default):** For Europe, AM/FM intervals: 9 kHz/50 kHz.

**M.EAST:** For Middle East, AM/FM intervals: 9 kHz/50 kHz.

### Date/Clock

Adjust the date, then adjust the time.  
Hour / Minute / Day / Month / Year

### Demo

Set the demonstration mode. Default is "ON".

- 3 Turn the volume knob to select [Finish], then press the knob.

## Clock settings

### ■ Synchronizing the clock time with FM RDS


Activate [RDS Clock Sync].  
See "Tuner function settings" (P.9).

### ■ Adjusting the clock manually

#### 📎 NOTE

• Deactivate [RDS Clock Sync] before adjusting the clock. See "Tuner function settings" (P.9).

- 1 Press and hold <⚙️> to display the settings.
- 2 Press <⏪>/<⏩> to select [⚙️].
- 3 Turn the volume knob to select [Time Format], then press the knob to select the time format ([12h] or [24h]).

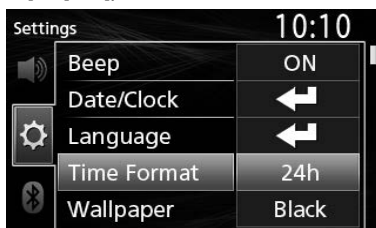


- 4 Turn the volume knob to select [Date/Clock], then press the knob.

Clock screen appears.



- 5 Turn the volume knob to adjust the hour, then press the knob.
- 6 Turn the volume knob to adjust the minute, then press the knob.
- 7 Turn the volume knob to adjust the day, then press the knob.
- 8 Turn the volume knob to adjust the month, then press the knob.
- 9 Turn the volume knob to adjust the year, then press the knob.
- 10 Press <⏪>.

# Basics

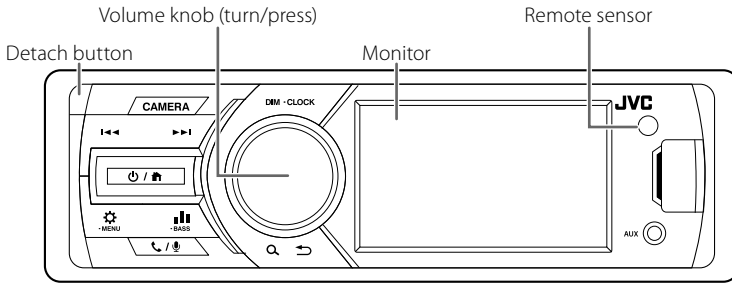

## Common operations

### Turning on the power

- 1 Press <Power / Home>.

### Turning off the power

- 1 Press and hold <Power / Home>.

### Adjusting the volume

- 1 Turn the volume knob.

### Mutes the sound

- 1 Press and hold the volume knob.
  - A speaker icon with a slash appears when the mute function is active.
  - To restore the sound, press and hold again, or adjust the volume.

### Display the clock


- 1 Press and hold the <DIM> button.

### Select dimmer mode


- 1 Press the <DIM> button.  
Dimmer 1, Dimmer 2, Dimmer 3

## How to attach/detach the faceplate

### Detach

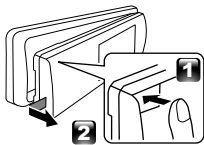

### Attach

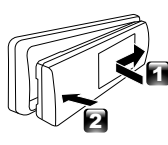

## Select a source

- 1 Press <Power / Home> to display the HOME screen. HOME screen appears.
- 2 Turn the volume knob to select the source, then press the knob.



 
- 1 Clock display
- 2 Switches to the FM tuner broadcast. (P.8)
- 3 Switches to the AM tuner broadcast. (P.8)
- 4 Switches to the DAB broadcast. (P.10)  
(KD-X561DBT only)
- 5 Plays a Bluetooth audio player. (P.13)
- 6 **[USB]**   
Plays files on a USB device. (P.5)
- [iPod]**   
Plays an iPod/iPhone. (P.7)
  - When iPod/iPhone is connected.
- 7 Switches to an external component connected to the AUX input terminal. (P.11)

# USB

## Preparation

### Connecting a USB device

- 1 Open the front port cover.
- 2 Connect the USB device with the USB cable (sold separately).



The unit reads the device and playback starts.

- USB maximum power supply current : DC 5 V = 1 A

### To disconnect the USB device:

- 1 Press **<⏻ / 🏠>** to display the HOME screen.
- 2 Turn the volume knob to select other than [USB], then press the knob.
- 3 Detach the USB device.

### Usable USB device


This unit can play MP3/ WMA/ AAC/ WAV/ FLAC/ OGG/ MPEG1/ MPEG2/ MPEG4/ H.264/ MKV/ JPEG/ BMP/ PNG files stored in a USB mass storage class device. **(P.21)**

- File system: FAT16/FAT32/NTFS
- This unit can recognize a total of 20 000 files (Audio files).
- The maximum number of folder layers : 6
- The maximum number of characters:
  - Folder names : 128 characters
  - File names : 128 characters
  - Tag : 128 characters

#### NOTE

- When the USB device is connected to this unit, it can be charged through the USB cable.
- Install the USB device in the place where it will not affect safe driving.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files may be erased depending on the operating conditions of the USB device. We shall have no compensation for any damage arising from any erased data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- Cap the USB terminal whenever not using.

## Playback operations

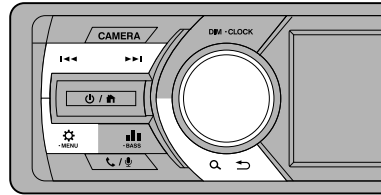

### Audio files/Video files

To	Do this
<b>Play/pause</b>	Press the volume knob.
<b>Select a file</b>	Press <b>&lt; ◀◀&gt;/&lt;▶▶ &gt;</b> repeatedly.
<b>Fast-backward/ Fast-forward</b>	Press and hold <b>&lt; ◀◀&gt;/&lt;▶▶ &gt;</b> . • Video files: Each time you press the button, the search speed changes.

### Picture files

To	Do this
<b>Rotates the image</b>	Turn the volume knob.
<b>Zoom</b>	Press the volume knob. x2, x3, x4, x1/2, x1/3, x1/4, x1 • Turn the volume knob to move the position up and down. • Press <b>&lt; ◀◀&gt;/&lt;▶▶ &gt;</b> to move the position left and right.

### Source screen (Audio files)



- 1 Playback status/Playing time/File number  
**Play time bar** : For confirmation of current playing position  
  - ↺ : Repeat playback mode indicator
  - ⌘ : Random playback mode indicator
- 2 Displays the information of the current file.  
Only a file name is displayed if there is no tag information.

## USB

### ■ Selecting a track in a list (Searches file)

- 1 Press <Q> <↵> to display the LIST screen.
- 2 Press <◀◀>/<▶▶> to select whether you search by audio files [🎵], video files [📺] or picture files [🖼️].



- 3 Turn the volume knob to select the desired folder, then press the knob.
  - When you select a folder its contents are displayed.
  - To return to the previous layer, press <Q> <↵>.
- 4 Turn the volume knob to select the desired item, then press the knob.  
Playback starts.

### Function settings

- 1 Press <⚙️> to display the function menu.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.
- 3 Press <Q> <↵> to exit.

#### Audio files (MP3/WMA/AAC/WAV/FLAC/OGG)

Repeat	All: Repeats all files. (🔄 indicator lights up.)
	One: Repeats current file. (🔄 indicator lights up.)

Random	OFF: Normal playback.
	ON: Randomly plays all files. (🎲 indicator lights up.)

#### Video files (MPEG1/MPEG2/MPEG4/H.264/MKV)

Screen Adjustment	Auto/Full/16:9/4:3 : Selects the aspect ratio.
-------------------	--

Repeat	All: Repeats all files.
	One: Repeats current file.

Video Setting	Brightness/Contrast/Color/Tint (0 to 8 : Default 4) : You can adjust image quality.
	Reset: To clear the adjustment.

#### Picture files (JPEG/BMP/PNG)

Slideshow	ON/OFF: Select the slideshow.
-----------	-------------------------------

 
Video Setting	Brightness/Contrast/Color/Tint (0 to 8 : Default 4) : You can adjust image quality.
	Reset: To clear the adjustment.

# iPod/iPhone

## Preparation

### ■ Connecting iPod/iPhone

- 1 Open the front port cover.
- 2 Connect the iPod/iPhone using the KS-U62 (optional accessory).



The unit reads the device and playback starts.

- USB maximum power supply current : DC 5 V = 1 A

### ■ To disconnect the iPod/iPhone

- 1 Press **<⏻ / ⏮>** to display the HOME screen.
- 2 Turn the volume knob to select other than [iPod], then press the knob.
- 3 Detach the iPod/iPhone.

### ■ Connectable iPod/iPhone

The following models can be connected to this unit.


Made for

- iPhone X
- iPhone SE
- iPhone 5s
- iPhone 8 Plus
- iPhone 6s Plus
- iPod touch (6th generation)
- iPhone 8
- iPhone 6s
- iPhone 7 Plus
- iPhone 6 Plus
- iPhone 7
- iPhone 6

#### 🔑 NOTE


- If you start playback after connecting the iPod, the music that has been played by the iPod is played first.

## Playback operations

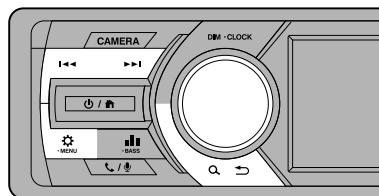

To	Do this
Play/pause	Press the volume knob.
Select a file	Press <b>&lt; ◀◀&gt;&gt;/&gt;&gt;▶▶ &gt;</b> repeatedly.
Fast-backward/ Fast-forward	Press and hold <b>&lt; ◀◀&gt;&gt;/&gt;&gt;▶▶ &gt;</b> .

### ■ Source screen

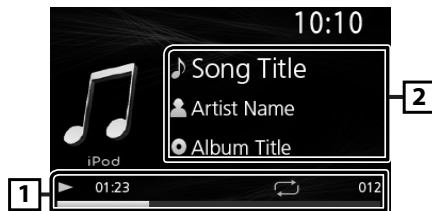

- 1 Playback status/Playing time/File number  
**Play time bar** : For confirmation of current playing position  
 : Repeat playback mode indicator  
 : Random playback mode indicator
- 2 Displays the information of the current file.

### ■ Selecting a content in a list

- 1 Press **<Q ⏪>** to display the LIST screen.
- 2 Turn the volume knob to select category, then press the knob.  
 • To return to the previous layer, press **<Q ⏩>**.
- 3 Turn the volume knob to select the desired item, then press the knob.


## Function settings

- 1 Press **<⚙>** to display the function menu.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.
- 3 Press **<Q ⏩>**.

Repeat	All: Repeats all files. indicator lights up.)
	One: Repeats current file. indicator lights up.)
	OFF: Repeat off.
Random	OFF: Normal playback.
	All: Functions the same as "Shuffle Songs". ( indicator lights up.)

# Tuner

## Tuner basic operations

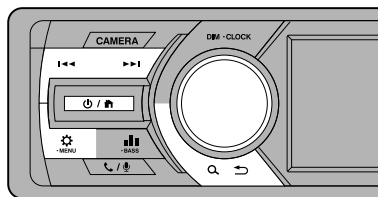

1 Press **<HOME>** to display the HOME screen.

2 Turn the volume knob to select [FM] or [AM], then press the knob.

3 Press **<FM/AM>** to search for a station automatically.

"Auto Seek" appears.

(or)


Press and hold **<FM/AM>** repeatedly to search for a station manually.

"Manual Seek" appears.

### NOTE

- The **ST** indicator lights up when receiving an FM stereo broadcast with sufficient signal strength.
- To store stations, perform [Manual Store] or [Auto Store].

## Source screen

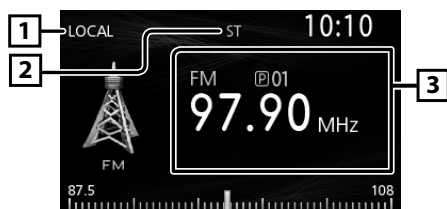

1 LOCAL indicator

2 ST (Stereo) indicator

3 Displays the information of the current station:  
PS name, Frequency, PTY Genre, Indicator Items

## Store a station

You can preset 15 stations for FM and 15 stations for AM.

1 Select the station you wish to store in the memory.

2 Press **<STORE>** to display the function menu.

3 Turn the volume knob to select [Manual Store], then press the knob.

4 Turn the volume knob to select a preset number, then press the knob.

### NOTE

- To exit, press **<Q>**.

## Select a stored station

1 Press **<Q>** to display the LIST screen.

2 Turn the volume knob to select a preset number, then press the knob.

### NOTE

- To exit, press **<Q>**.



## Tuner

### Tuner function settings

- 1 Press to display the function menu.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.
- 3 Press .

<b>Manual Store</b>	Stores a station manually. While listening to a station you want to store, turn the volume knob to select a preset number, then press the knob.
<b>Auto Store</b>	Automatically searches and stores the 15 stations with the strongest signals for the selected band. • “Auto Store” appears.
<b>Local Seek</b>	Tunes in only to the stations with sufficient signal strength. ( <b>LOCAL</b> indicator lights up.) “ON”, “OFF” (Default)
<b>Area</b>	<b>EUROPE(Default):</b> For Europe, AM/FM intervals: 9 kHz/50 kHz. <b>M.EAST:</b> For Middle East, AM/FM intervals: 9 kHz/50 kHz.
<b>Mono *1</b>	Determines whether to receive stereo broadcasts in the stereo mode or monaural mode (the <b>MONO</b> indicator lights up). “ON”, “OFF” (Default)
<b>RDS *1</b>	<b>ON:</b> Activates FM Radio Data System features <b>OFF:</b> Deactivates the function.
<b>PTY *1</b>	Searches for a program by program type.
<b>AF *1</b>	When station reception is poor, automatically switches to the station that is broadcasting the same program over the same Radio Data System network. “ON” (Default), “OFF”
<b>TA *1</b>	Switches to the traffic information automatically when the traffic bulletin starts. ( <b>TI</b> indicator lights up.) “ON”, “OFF” (Default)
<b>RDS Clock Sync *1</b>	Synchronizing the Radio Data System station time data and this unit’s clock. “ON” (Default), “OFF”

\*1 FM only

### ■ Search by program type


- 1 Press to display the function menu.
- 2 Turn the volume knob to select [PTY], then press the knob.
- 3 Turn the volume knob to select a program type, then press the knob  
PTY Search starts.

#### NOTE

- To exit, press .

# DAB (KD-X561DBT)

## DAB Basic Operation

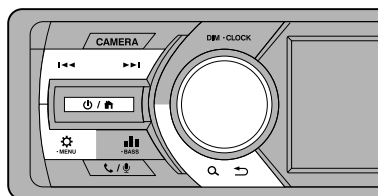


- 1 Press **<Power/Home>** to display the HOME screen.
- 2 Turn the volume knob to select [DAB], then press the knob.
- 3 Press **<Left/Right>** to search for an ensemble automatically.  
"Auto Seek" appears.  
(or)  
Press and hold **<Left/Right>** repeatedly to search for an ensemble manually.  
"Manual Seek" appears.
- 4 Press and hold **<Left/Right>** select a service (either primary or secondary) to listen to.

### NOTE

- To store service, perform [Favorite].

### Source screen

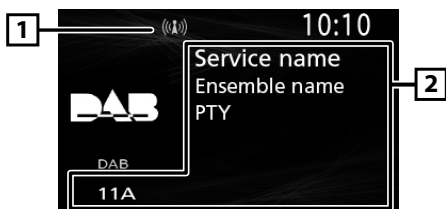

- 1 Displays the received signal strength.
- 2 Displays the information of the current service:  
Service name, Ensemble name, PTY Genre

### Select a service

- 1 Press **<Search/Right>** to display the LIST screen.
- 2 Turn the volume knob to select a service, then press the knob.

### Store a services

You can store up to 15 services

- 1 Select a service you wish to store in memory.
- 2 Press **<Function>** to display the function menu.
- 3 Turn the volume knob to select [Favorite], then press the knob.
- 4 Turn the volume knob to select a preset number, then press the knob.

### NOTE

- To exit, press **<Search/Right>**.

### Select a stored service

You can store up to 15 services

- 1 Press **<Search/Right>** to display the LIST screen.
- 2 Press **<Left/Right>** to select [**★**].
- 3 Turn the volume knob to select a service, then press the knob.

### NOTE

- To exit, press **<Search/Right>**.

## DAB function settings

- 1 Press **<Function>** to display the function menu.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.
- 3 Press **<Search/Right>** to exit.

<b>Scan Station</b>	Updates the DAB Service List.
<b>Favorite</b>	Stores a service. While listening to a service you want to store, turn the volume knob to select a preset number, then press the knob.
<b>Reset</b>	Select [Reset] and then select [Yes] to set the DAB settings to the initial default settings.
<b>TI</b>	Switches to the traffic information automatically when the traffic bulletin starts. "ON", "OFF" (Default)

## DAB (KD-X561DBT)

### Setup

<b>Priority</b>	If the same service is provided by Radio Data System when reception of the service being provided by Digital Radio becomes poor, automatically switches to Radio Data System. "ON", "OFF" (Default)
<b>Related Service</b>	When you select ON, the unit switches to a related service (if exists) when a DAB service network is not available. "ON", "OFF" (Default)
<b>Antenna Power</b>	Sets power supply to the Digital Radio antenna. Set to "ON" when the Digital Radio antenna in use is equipped with a booster. Default is "ON".
<b>PTY Search</b>	Searches for a program by program type.
<b>Zoom DLS</b>	Display the Dynamic Label Segment screen.
<b>SERVICE</b>	Displays the Service List screen.

### ▣ Search by program type


- 1 Press **<⚙>** to display the function menu.
- 2 Turn the volume knob to select [PTY Search], then press the knob.
- 3 Turn the volume knob to select a program type, then press the knob  
PTY Search starts.

#### 📎 NOTE

- To exit, press **<Q ↩>**.

## External Components

### Using external audio players

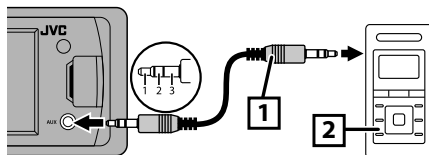

- 1 3.5 mm stereo mini plug (Sold separately)  
Use a 3-core plug head stereo mini plug for optimum audio output.
- 2 Portable audio player (Sold separately)

### ▣ Starting playback

- 1 Connect an external component to the AUX input terminal.
- 2 Press **<⏻ / ⏮>** to display the HOME screen.
- 3 Turn the volume knob to select [AUX], then press the knob.
- 4 Turn on the connected component and start playing the source.

### Rear view camera

To use a rear view camera, the REVERSE lead connection is required. For connecting a rear view camera. (P.20)

### ▣ Displaying the picture from the rear view camera

The rear view screen is displayed when you shift the gear to the reverse (R) position.



### ▣ To display the picture from the rear view camera manually

- 1 Press **<CAMERA>**.

# Bluetooth® smartphone

## ■ About the Bluetooth smartphone and Bluetooth audio player

This unit conforms to the following Bluetooth specifications:

### Version

Bluetooth Ver.4.2

### Profile

Smartphone/ Cell-phone:

HFP (Hands Free Profile)

PBAP (Phonebook Access Profile)

Audio player:

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio/Video Remote Control Profile)

### Sound codec

SBC

## ■ About smartphone compatible with Phone book Access Profile (PBAP)

If your smartphone supports PBAP, you can display the following items when the smartphone is connected.

- Phone book (up to 1000 entries)
- Dialed calls, received calls, and missed calls (up to 20 entries in total)

## Register your smartphone to the unit

You can use your Bluetooth smartphone when paired to this unit.

- You can pair the device and the unit using SSP (Secure Simple Pairing) which only requires confirmation.
- One device can be connected at a time.
- When you register a new Bluetooth device, disconnect the Bluetooth device currently connected and then register the new device.

### 1 Turn on the Bluetooth function on your smartphone/cell-phone.



### 2 Search the unit ("KD-X56\*") from your smartphone/cell-phone.

If a PIN code is required, enter the PIN code ("0000").

## ■ Disconnecting the device

- Turn off the Bluetooth function from your smartphone/cell-phone.
- Turn off the ignition switch.

## Receive a call

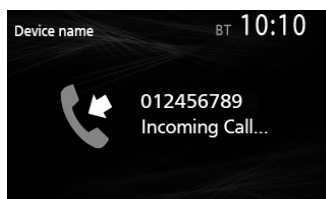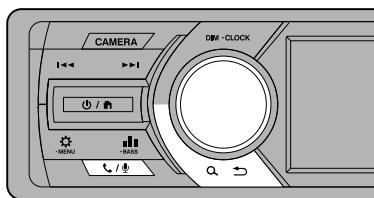

To	Do this
Answer a call	Press <CALL> / <MICROPHONE>.

## ■ Operations during a call


To	Do this
End a call	Press <CALL> / <MICROPHONE>.

Adjust the phone volume	Turn the volume knob.
-------------------------	-----------------------

Switching between hands-free mode and phone mode	Press <CALL> <MICROPHONE>. Each time you press the button, "Transfer!" appears and talking method is switched between hands-free mode and phone mode.
--	---

# Bluetooth® smartphone

## Make a phone call

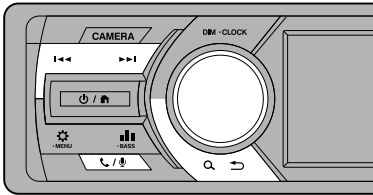

1 Press **<Call/Phone>** to enter Bluetooth mode.



2 Press **<Left/Right>** to select a method to make a call ([**Call**]: from the calls history/[**Phone**]: from the phone book).

3 Turn the volume knob to select the target, then press the knob to make a call.

### NOTE

- Calls history icon: **Call** (Incoming Calls), **Phone** (Outgoing Calls), **Missed** (Missed Calls).

## Call by voice

1 Press and hold **<Call/Phone>** to display the voice dialing screen.


You can also display the voice dialing screen by selecting [**Call**] as the method to make a call on the phone screen.

2 Press the volume knob to activate voice recognition function.

“Please speak after the beep” appears and the beep sounds.

3 Say the name of the person you want to call.

## Playing Bluetooth Audio Device

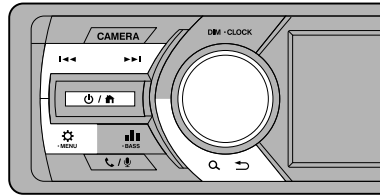


1 Press **<Power/Home>** to display the HOME screen.

2 Turn the volume knob to select [BT Audio], then press the knob.

To	Do this
Play/pause	Press the volume knob.
Select a file	Press <b>&lt;Left/Right&gt;</b> repeatedly.
Fast-backward/ Fast-forward	Press and hold <b>&lt;Left/Right&gt;</b> .

## Source screen

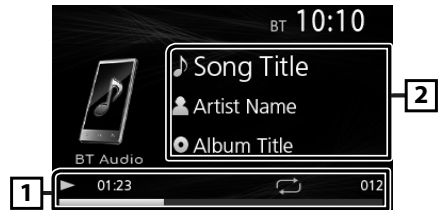

1 Playback status/Playing time/File number

Play time bar : For confirmation of current playing position

**Repeat** : Repeat playback mode indicator

**Random** : Random playback mode indicator

2 Displays the information of the current file.

### NOTE

- Operations and display indications may differ according to their availability on the connected device.

## Selecting a content in a list

1 Press **<Search/Back>** to display the LIST screen.

2 Turn the volume knob to select an item, then press the knob.

- To return to the previous layer, press **<Search/Back>**.

## Bluetooth smartphone

# Setup


### Function settings

- 1 Press **<⚙>** to display the function menu.
- 2 Turn the volume knob to select the item to set (see the table below), then press the knob to make a selection.
- 3 Press **<Q>** **<↶>** to exit.


<b>Repeat</b>	All: Repeats all files. (↺ indicator lights up.)
	One: Repeats current file. (↺ indicator lights up.)
	OFF: Repeat off.

<b>Random</b>	OFF: Normal playback.
	All: Randomly plays all files. (↻ indicator lights up.)

### Settings

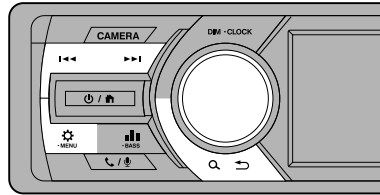

- 1 Press and hold **<⚙>** to display the settings.

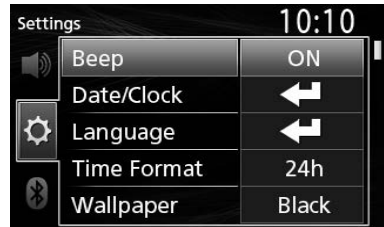

- 2 Press **<◀◀>>>** to select the category.
- 3 Turn the volume knob to select an item (see the following table), then press the knob.
- 4 Repeat step 3 until the desired item is selected/activated or follow the instructions stated on the selected item.
- 5 Press **<Q>** **<↶>**.

#### Audio Settings

<b>Fader</b>	R12 — F12 (00): Adjusts the front and rear speaker output balance.
<b>Balance</b>	L12 — R12 (00): Adjusts the left and right speaker output balance.

#### General Settings


<b>Beep</b>	ON/OFF: Activates or deactivates the keypress tone. Default is "ON".
<b>Date/Clock</b>	Adjusts the date and clock. <b>(P.3)</b>
<b>Language</b>	Selects the text language used for on-screen information.
<b>Time Format</b>	12h/24h: Selects time format. Default is "24h".
<b>Wallpaper</b>	Black/Blue: Selects the wallpaper image.
<b>Demo</b>	Set the demonstration mode. Default is "ON".
<b>Initialize</b>	Select [Initialize] and then select [Yes] to set all the settings to the initial default settings.

## Setup

### Bluetooth Settings

<b>Sync</b>	ON/OFF: Activates or deactivates the synchronization of the phonebook in the connected smartphone with the unit.
<b>Phonebook</b>	
<b>BT Information</b>	Displays the information about the connected Bluetooth device (device name, phone name, and mac address).

### Sound settings

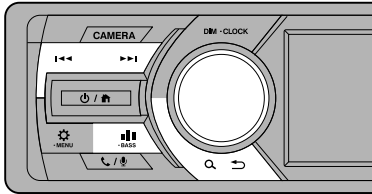
 



 
1 Press  to display the sound setting.



 

 
 

2 Turn the volume knob to select an item (see the following table), then press the knob.

3 Repeat step 2 until the desired item is selected/activated or follow the instructions stated on the selected item.

 

 
 

4 Press  .

<b>Graphic Equalizer</b>	Selects a preset equalizer suitable to the music genre. Flat / DRVN / Hard Rock / Hip Hop / Jazz / Pop / R & B / User / Classical Select [User] to use the settings made 1) Press the volume knob to select the frequency. 2) Turn the volume knob to adjust the level. 3) Press   .
<b>Loudness</b>	Sets the amounts of boost of low and high tones. "ON", "OFF" (Default)

**X'over** You can set the crossover frequency of speakers.

- 1) Press    to select the speaker.
- 2) Press the volume knob to select the item.
- 3) Turn the volume knob to adjust the value.
- 4) Press  .

**Delay** Adjust the sound delay time so that the sounds from different speakers arrive at the listener sitting on the selected seat at the same time.


- 1) Press    to select the speaker.
- 2) Turn the volume knob to adjust the value.
- 3) Press  .

# Remote control

This unit can be operated using the remote control. The remote control RM-RK258 (optional accessory) can be used.

## Functions of the remote control buttons

- Aim the remote control directly at the remote sensor on the faceplate.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

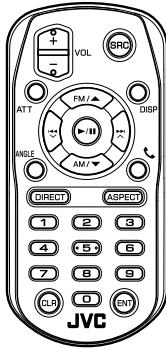

<b>SRC</b>	Switches to the source to be played.
<b>VOL + -</b>	Adjusts the volume.
<b>ATT</b>	Mutes/restores the sound
<b>DISP</b>	Select dimmer mode.
<b>FM/▲</b>	Selects the folder to be played.
<b>AM/▼</b>	
<b>◀▶</b>	Selects the track or file to be played.
<b>▶▶</b>	During tuner source, switches to broadcast stations received by the unit.
<b>ANGLE</b>	Not used.
<b>☎</b>	When a call comes in, answers the call.
<b>DIRECT</b>	Not used.
<b>ASPECT</b>	Not used.
<b>Numeric Keypad</b>	Not used.
<b>CLR</b>	Not used.
<b>ENT</b>	Not used.



# Installation

## Before installation

Before installation of this unit, please note the following precautions.

### ▲WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

### ▲CAUTION

- Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.


### 🔧 NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, make sure to install the unit so that the front panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Secure the wires with cable clamps and wrap vinyl tape around the wires that comes into contact with metal parts to protect the wires and to prevent short circuit.

- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth antenna.



## ■ Supplied accessories for installation

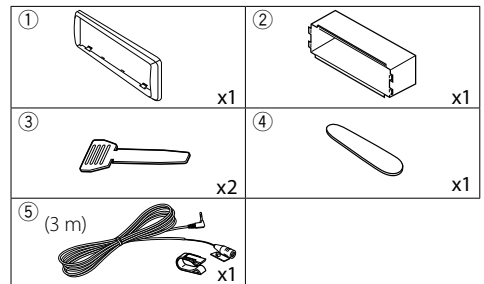


# Installation

## Installation procedure

- 1) To prevent a short circuit, remove the key from the ignition and disconnect the  $\ominus$  terminal of the battery.
- 2) Make the proper input and output wire connections for each unit.
- 3) Connect the wire on the wiring harness.
- 4) Take Connector B on the wiring harness and connect it to the speaker connector in your vehicle.
- 5) Take Connector A on the wiring harness and connect it to the external power connector on your vehicle.
- 6) Connect the wiring harness connector to the unit.
- 7) Install the unit in your car.
- 8) Reconnect the  $\ominus$  terminal of the battery.
- 9) Press the reset button.

## Installing the unit

### Non-Japanese cars

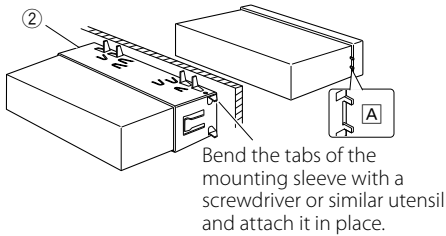


#### NOTE

- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).
- If the panel opening of your vehicle is too small to fit the unit (A), trim (the upper and lower sides and right and left sides of) panel opening.


### Trim plate

- 1) Attach accessory ① to the unit.

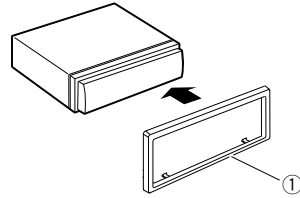

### Microphone unit


- 1) Check the installation position of the microphone (accessory ⑤).
- 2) Clean the installation surface.
- 3) Remove the separator of the microphone (accessory ⑤), and stick the microphone to the place shown below.
- 4) Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory ⑤) to the driver.

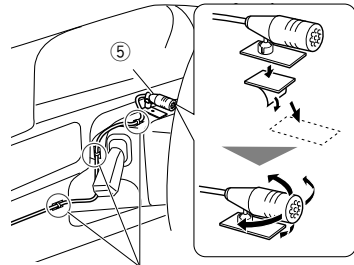

Fix a cable with a commercial item of tape.

#### NOTE


- Use the clips if necessary.

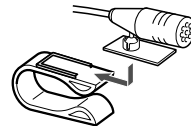


## Installation

### ■ Removing the trim plate

- 1) Use the extraction key (accessory ④) to lever out the four tabs (two on the top part, two on the bottom part).

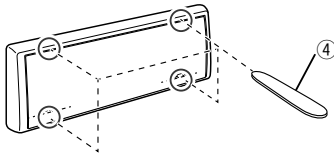


- 2) Pull the trim plate forward.

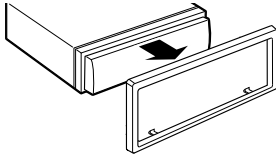


### ■ Removing the unit

- 1) Remove the trim plate by referring to step 1 in "Removing the trim plate".
- 2) Detach the faceplate.

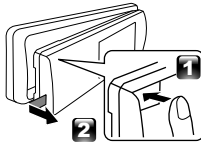

- 3) Insert the two extraction key (accessory ③) deeply into the slots on each side, as shown.

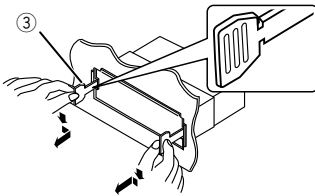

- 4) Lower the removal tool toward the bottom, and pull out the unit halfway while pressing towards the inside.

#### 🔧 NOTE

- Be careful to avoid injury from the catch pins on the extraction key.
- 5) Pull the unit all the way out with your hands, being careful not to drop it.

### ■ Wiring harness connector function guide

Pin	Color and function	
A-4	Yellow	Battery
A-5	Blue/White <sup>[1]</sup>	Power Control
A-7	Red	Ignition (ACC)
A-8	Black	Earth (Ground) Connection
B-1/ B-2	Purple (+) / Purple/Black (-)	Rear Right
B-3/ B-4	Gray (+) / Gray/Black (-)	Front Right
B-5/ B-6	White (+) / White/Black (-)	Front Left
B-7/ B-8	Green (+) / Green/Black (-)	Rear Left

<sup>[1]</sup> Max. 150mA, 12V

- Speaker Impedance: 4-8 Ω


#### ⚠ CAUTION

Before you connect the commercially available ISO connectors to the unit, check the following condition:

- Make sure that the pin assignment of the connector matches with the JVC unit.
- Take extra notice of the power wire.
- In case battery wire and ignition wire are not corresponding then change them accordingly.
- In case the car does not have an ignition wire, use a commercially available interface.

# Installation

## ■ Connecting wires to terminals

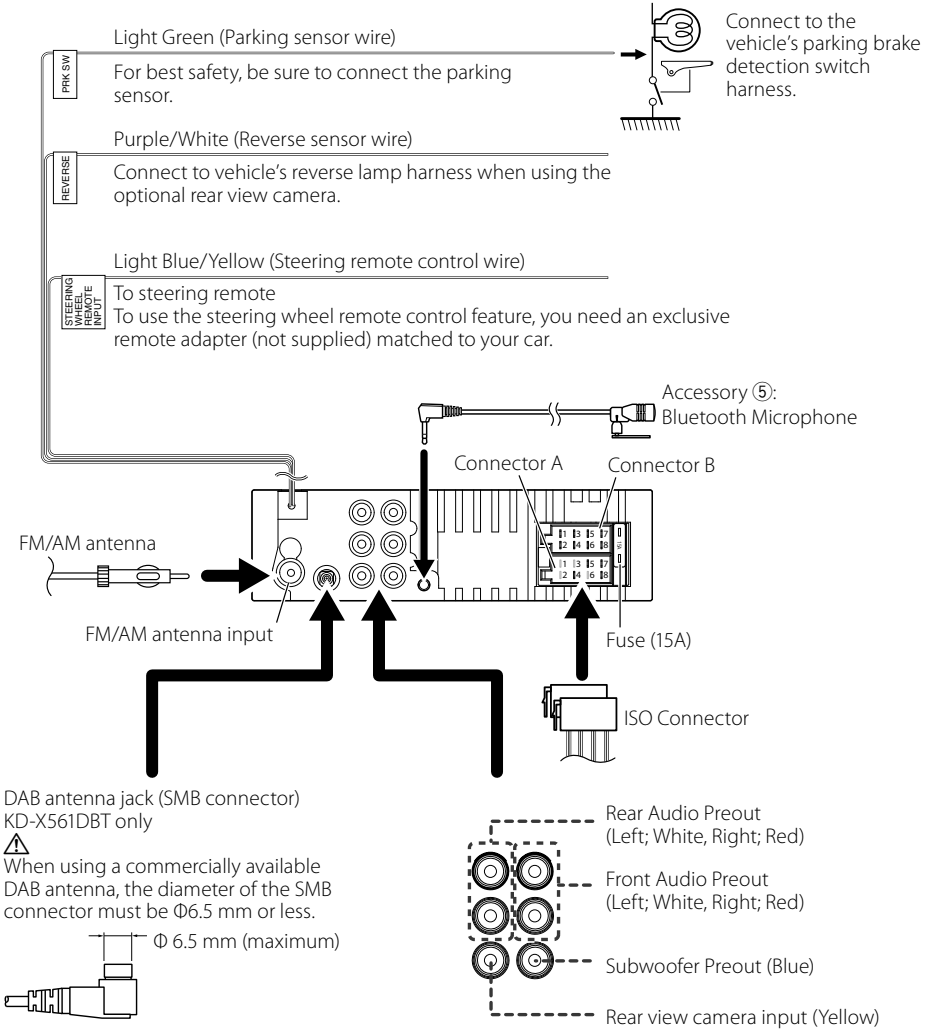

# About this Unit

## Maintenance

### ■ Cleaning the Unit

 
If the front panel of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the front panel is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

### ⚠ CAUTION

- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the front panel with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase screened print.

### ■ Cleaning the connector

Detach the faceplate and clean the connector gently with a cotton swab. Be careful not to damage the connector.



Connector (on the reverse side of the faceplate)

## More information

### ■ Playable Audio files

Audio format	Bit rate/ Bit count	Sampling frequency
MP3 (.mp3)	32 – 320kbps, VBR	16 – 48 kHz
WMA (.wma)	16 – 384kbps	8 – 48 kHz
AAC-LC (.m4a)	16 – 448kbps	8 – 48 kHz
WAV (.wav)	16/24 bit	8 – 96 kHz
FLAC (.flac)	16 bit	8 – 96 kHz
Vorbis (.ogg)	500kbps	48 kHz

- This unit can show ID3 Tag Version 1.0/1.1/2.2/2.3/2.4 (for MP3).
- The maximum number of characters:
  - Tag : 128 characters

### 📎 NOTE

- WMA and AAC of which is covered with DRM cannot be played.
- Although the audio files are complied with the standards listed above, the play may be impossible depending on the types or conditions of media or device.

### ■ Acceptable Video files

Video format	Video codec	Audio codec
MPEG-1 (.mpg, .mpeg)	MPEG-1	MPEG1 Audio Layer 2
MPEG-2 (.mpg, .mpeg)	MPEG-2	MPEG1 Audio Layer 2
MPEG-4 (.mp4, .avi)	MPEG-4	MP3, AAC-LC (2ch)
H.264 (.mp4, .mkv, .avi, .flv, .f4v)	H.264/MPG-4 AVC	MP3, AAC
Matroska (.mkv)	H.264/MPEG-4 AVC, MPEG4	MP3, AAC, LPCM

### ■ Acceptable Picture files

- JPEG (.jpg)
  - 32 x 32 to 5,000 x 5,000 resolution
  - It may take time to display the file.
- BMP (.bmp)
  - 32 x 32 to 5,000 x 5,000 resolution
  - It may take time to display the file.
- PNG (.png)
  - 32 x 32 to 5,000 x 5,000 resolution
  - It may take time to display the file.

## About this Unit

### Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

- For operations with the external components, refer also to the instructions supplied with the adapters used for the connections (as well as the instructions supplied with the external components).

#### ■ General

##### **No sound comes out of the speakers.**

- Adjust the volume to the optimum level.
- Check the cords and connections.

##### **The unit does not work at all.**

- Reset the unit. (P.2)

##### **The remote controller does not work.**

- Replace the battery.

#### ■ USB

##### **While playing a track, sound is sometimes interrupted.**

- The tracks are not properly copied into the USB device. Copy the tracks again, and try again.

#### ■ iPod/iPhone

##### **No sound comes out of the speakers.**

- Disconnect the iPod/iPhone, then connect it again.
- Select another source, then reselect "iPod".

##### **The iPod/iPhone does not turn on or does not work.**

- Check the connecting cable and its connection.
- Update the firmware version of iPod/iPhone.
- Charge the battery of iPod/iPhone.
- Reset the iPod/iPhone.

##### **Sound is distorted.**

- Deactivate the equalizer either on this unit or the iPod/iPhone.

##### **A lot of noise is generated.**

- Turn off (uncheck) "VoiceOver" on the iPod/iPhone. For details, visit <<http://www.apple.com>>.

#### ■ Tuner

##### **Automatic presetting does not work.**

- Store stations manually. (P.8)

##### **Static noise while listening to the radio.**

- Connect the antenna firmly.

#### ■ Bluetooth

##### **Phone sound quality is poor.**

- Reduce the distance between the unit and the Bluetooth mobile phone.
- Move the car to a place where you can get a better signal reception.

##### **The sound is interrupted or skipped while using a Bluetooth audio player.**

- Reduce the distance between the unit and the Bluetooth audio player.
- Turn off, then turn on the unit. (When the sound is not yet restored) connect the player again.

##### **The connected audio player cannot be controlled.**

- Check whether the connected audio player supports AVRCP (Audio/Video Remote Control Profile).

##### **The Bluetooth device does not detect the unit.**

- Search from the Bluetooth device again.

##### **The unit does not pair with the Bluetooth device.**

- Turn off, then turn on the Bluetooth device.
- Disconnect the Bluetooth device currently connected and then register the new device.

(P.12)

## About this Unit

### Specifications

#### Monitor section

**Picture Size**

: 3.0 inch display

**Drive System**

: TFT active matrix system

**Number of Pixels**

: 320H x 240V

**Aspect Ratio**

: 16:9 (wide)

**Back Lighting**

: LED

#### USB interface section


**USB Standard**

: USB 2.0 High Speed

**File System**

: FAT 16/ 32, NTFS

**Maximum Power Supply Current**

: DC 5 V  1.0 A

**Frequency Response**

: 20 – 20,000 Hz

**Audio Decoder**

: MP3/ WMA/ AAC/ WAV/ FLAC/ OGG

**Video Decoder**

: MPEG1/ MPEG2/ MPEG4/ H.264/ MKV/ JPEG/ BMP/ PNG

#### Bluetooth section

**Technology**

: Bluetooth Ver.4.2

**Frequency**

: 2.402 – 2.480 GHz

**Output Power**

: +8 dBm (AVE), Power Class1

**Maximum Communication range**

: Line of sight approx. 10 m (32.8 ft)

**Audio Codec**

SBC

**Profile (Multi Profile support)**

- HFP (Hands Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)
- PBAP (Phonebook Access Profile)

#### DAB section

**Frequency Range**

BAND III : 174.928 MHz — 239.200 MHz

#### Digital Antenna Connector section

**Connector type**

: SMB

**Output Voltage**

: 12 V DC car battery

**Maximum Current**

: <100 mA

#### FM tuner section

**Frequency Range (step)**

: 87.5 MHz – 108.0 MHz (50 kHz)

**Usable Sensitivity**

: 13.2 dBf

**Frequency Response**

: 30 Hz – 14 kHz

**S/N Ratio (dB)**

: 55 dB (MONO)

**Stereo separation**

: 35 dB (1kHz)

#### AM tuner section

**Frequency Range (step)**

: 531 – 1611 kHz (9 kHz)

**Usable Sensitivity**

: 35 dB $\mu$

#### DSP section

**Graphics equalizer**

Band :13 Band

Frequency: 62.5/100/160/250/400/630/1k/1.6k/2.5k/  
4k/6.3k/10k/16kHz

Gain: -9 – +9 (1 dB/Step)

**2Way X'Over**

**High pass filter**

Frequency: Through, 40/60/80/120/160 Hz

Slope: -6/-12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**Low pass filter**

Frequency: Through, 40/60/80/120/160 Hz

Slope: -6/-12/-18/-24 dB/Oct.

Gain: -8/-7/-6/-5/-4/-3/-2/-1/0 dB

**Position**

Front/Rear/Subwoofer Delay:

0-18 mS (0.03 mS/Step)

## About this Unit

### Video section

Video Input Level  
: 1.0 Vp-p/ 75 Ω

### AUX section

External Audio Max input Level  
: 1.5 V/ 25 kΩ

### Audio section

Maximum Power (Front & Rear)  
: 45 W × 4

Full Bandwidth Power (1% THD)  
: 16 W × 4

Preout Impedance  
: 10 kΩ

Preout Level/Load  
: 2.0 V/10 kΩ

Speaker Impedance  
: 4 – 8 Ω

### General

Operating Voltage  
: 12 V DC car battery

Installation Dimensions (W × H × D)  
: 182 × 52 × 117 mm (with sleeve)

Weight  
: 0.75 kg

## Copyrights

- The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone, iPod, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

### NOTE

- Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.
- Specifications subject to change without notice.



## About this Unit

---

- libFLAC  
Copyright (C) 2000-2009 Josh Coalson  
Copyright (C) 2011-2013 Xiph.Org Foundation
  - Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
  - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
  - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- libogg  
Copyright (c) 2002, Xiph.org Foundation  
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
  - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
  - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
  - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


## Information on Disposal of Old Electrical and Electronic Equipment and Batteries (applicable for EU countries that have adopted separate waste collection systems)

Products and batteries with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment and batteries should be recycled at a facility capable of handling these items and their waste byproducts.

Contact your local authority for details in locating a recycle facility nearest to you.

Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.

Notice: The sign "Pb" below the symbol for batteries indicates that this battery contains lead.

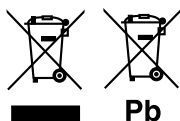


### For Israel

#### מידע בדבר השלכה לאשפה של ציוד חשמלי ואלקטרוני ישן וכן סוללות (רלוונטי למדינות שמשמשות במערכת איסוף אשפה מופרדת).

לא ניתן להשליך מוצרים וסוללות עם הסימון (פח אשפה עם X עליו) כאשפה ביתית רגילה.

יש למחזר ציוד חשמלי ואלקטרוני ישן וכן סוללות במתקן המסוגל לטפל בפריטים כאלה ובתוצרי הלוואי שלהם. צרו קשר עם הרשות המקומית לקבלת פרטים אודות מתקן המיחזור הקרוב אליכם. מיחזור והשלכה לאשפה נאותים יעזרו לשמר משאבים ולמנוע השפעות שליליות על בריאותנו ועל הסביבה.

שימו לב: הסימון Pb שמתחת לסימון עבור סוללות מציינ שהסוללה מכילה עופרת.

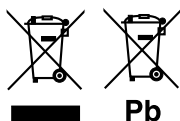

### For Europe sales area Declaration of Conformity with regard to the RE Directive 2014/53/EU Declaration of Conformity with regard to the RoHS Directive 2011/65/EU

#### Manufacturer:

JVC KENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa  
221-0022, JAPAN

#### EU Representative:

JVKENWOOD Europe B.V.  
Amsterdamseweg 37, 1422 AC UITHOORN, THE  
NETHERLANDS

#### English

Hereby, JVC KENWOOD declares that the radio equipment KD-X561DBT/KD-X560BT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

#### Français

Par la présente, JVC KENWOOD déclare que l'équipement radio KD-X561DBT/KD-X560BT est conforme à la directive 2014/53/UE. L'intégralité de la déclaration de conformité UE est disponible à l'adresse Internet suivante :

#### Deutsch

Hiermit erklärt JVC KENWOOD, dass das Funkgerät KD-X561DBT/KD-X560BT der Richtlinie 2014/53/EU entspricht. Der volle Text der EU-Konformitätserklärung steht unter der folgenden Internetadresse zur Verfügung:

#### Nederlands

Hierbij verklaart JVC KENWOOD dat de radioapparatuur KD-X561DBT/KD-X560BT in overeenstemming is met Richtlijn 2014/53/EU. De volledige tekst van de EU-verklaring van overeenstemming is te vinden op het volgende internetadres:

#### Italiano

Con la presente, JVC KENWOOD dichiara che l'apparecchio radio KD-X561DBT/KD-X560BT è conforme alla Direttiva 2014/53/UE. Il testo integrale della dichiarazione di conformità UE è disponibile al seguente indirizzo internet:

#### Español

Por la presente, JVC KENWOOD declara que el equipo de radio KD-X561DBT/KD-X560BT cumple la Directiva 2014/53/UE. El texto completo de la declaración de conformidad con la UE está disponible en la siguiente dirección de internet:

#### Português

Deste modo, a JVC KENWOOD declara que o equipamento de rádio KD-X561DBT/KD-X560BT está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade da UE está disponível no seguinte endereço de internet:

#### Polska

Niniejszym, JVC KENWOOD deklaruje, że sprzęt radiowy KD-X561DBT/KD-X560BT jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności EU jest dostępny pod adresem:

#### Český

Společnost JVC KENWOOD tímto prohlašuje, že rádiové zařízení KD-X561DBT/KD-X560BT splňuje podmínky směrnice 2014/53/EU. Plný text EU prohlášení o shodě je dostupný na následující internetové adrese:

## Magyar

JVC KENWOOD ezennel kijelenti, hogy a KD-X561DBT/ KD-X560BT rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU konformitási nyilatkozat teljes szövege az alábbi weboldalon érhető el:

## Hrvatski

JVC KENWOOD ovim izjavljuje da je radio oprema KD-X561DBT/ KD-X560BT u skladu s Direktivom 2014/53/EU. Cjeloviti tekst deklaracije Europske unije o usklađenosti dostupan je na sljedećoj internet adresi:

## Svenska

Härmed försäkras JVC KENWOOD att radioutrustningen KD-X561DBT/ KD-X560BT är i enlighet med direktiv 2014/53 / EU. Den fullständiga texten av EU-försäkran om överensstämmelse finns på följande Internetadress :

## Suomi

JVC KENWOOD julistaa täten, että radiolaite KD-X561DBT/ KD-X560BT on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutus löytyy kokonaisuudessaan seuraavasta internet-osoitteesta:

## Slovensko

S tem JVC KENWOOD izjavlja, da je radijska oprema KD-X561DBT/ KD-X560BT v skladu z Direktivo 2014/53/EU. Celotno besedilo direktive EU o skladnosti je dostopno na tem spletnem naslovu:

## Slovensky

Spoločnosť JVC KENWOOD týmto vyhlasuje, že rádiové zariadenie KD-X561DBT/ KD-X560BT vyhovuje smernici 2014/53/EÚ. Celý text EÚ vyhlásenia o zhode nájdete na nasledovnej internetovej adrese:

## Dansk

Herved erklærer JVC KENWOOD, at radioustyret KD-X561DBT/ KD-X560BT er i overensstemmelse med Direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde ordlyd er tilgængelig på følgende internetadresse:

## Norsk

JVC KENWOOD erklærer herved at radioustyret KD-X561DBT/ KD-X560BT er i samsvar med Direktiv 2014/53/EU. Den fullstendige teksten til EU-konformitetserklæringen er tilgjengelig på følgende internetadresse:

## Ελληνικά

Με το παρόν, η JVC KENWOOD δηλώνει ότι ο ραδιοεξοπλισμός KD-X561DBT/ KD-X560BT συμμορφώνεται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ είναι διαθέσιμο στην ακόλουθη διεύθυνση στο διαδίκτυο:

## Eesti

Käesolevaga JVC KENWOOD kinnitab, et KD-X561DBT/ KD-X560BT raadiovarustus on vastavuses direktiiviga 2014/53/EL. ELi vastavusdeklaratsiooni terviktekst on kättesaadav järgmisel internetiaadressil:

## Latviešu

JVC KENWOOD ar šo deklarē, ka radio aparatūra KD-X561DBT/ KD-X560BT atbilst direktivas 2014/53/ES prasībām. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā tīmekļa adresē:

## Lietuviškai

Šiuo JVC KENWOOD pažymi, kad radijo įranga KD-X561DBT/ KD-X560BT atitinka 2014/53/EB direktyvos reikalavimus. Visą EB direktyvos atitikties deklaracijos tekstą galite rasti šiuo internetiniui adresu:

## Malti

B'dan, JVC KENWOOD jiddikjara li t-tagħmir tar-radju KD-X561DBT/ KD-X560BT huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità huwa disponibbli fl-indirizz intranet li gej:

## Українська

Таким чином, компанія JVC KENWOOD заявляє, що радіобладнання KD-X561DBT/ KD-X560BT відповідає Директиві 2014/53/ЄУ. Повний текст декларації про відповідність ЄС можна знайти в Інтернеті за такою адресою:

## Türkçe

Burada, JVC KENWOOD KD-X561DBT/ KD-X560BT radyo ekipmanının 2014/53/ AB Direktifine uygun olduğunu bildirir. AB uyumluluk deklarasyonunun tam metni aşağıdaki internet adresinde mevcuttur.

## Русский

JVC KENWOOD настоящим заявляет, что радиооборудование KD-X561DBT/ KD-X560BT соответствует Директиве 2014/53/ЕU. Полный текст декларации соответствия ЕС доступен по следующему адресу в сети Интернет:

## Limba română

Prin prezenta, JVC KENWOOD declară că echipamentul radio KD-X561DBT/ KD-X560BT este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației de conformitate UE este disponibil la următoarea adresă de internet:

## Български език

С настоящото JVC KENWOOD декларира, че радиооборудването на KD-X561DBT/ KD-X560BT е в съответствие с Директива 2014/53/ЕС. Пълният текст на ЕС декларацията за съответствие е достъпен на следния интернет адрес:

**JVC**