



Additional Information

Setting GY-HD250/251 to enable RM-LP25U CALL button and TALLY/PREVIEW input

To enable the RM-LP25U CALL button and TALLY/PREVIEW input, set the TALLY SYSTEM menu on GY-HD250/251 to STUDIO.

TALLY SYSTEM menu on GY-HD250/251

--- OTHERS[2/2] ---	
TALLY SYSTEM	STUDIO
1394 REC TRIG.	OFF
BACK SPACE[HDV]	P-1394
DR-HD100 A.OFF	OFF
MENU ALL RESET	CANCEL
PAGE BACK	
DRUM HOUR	000000H
FAN HOUR	000000H

- When setting TALLY SYSTEM to STUDIO, set RM-LP25U to OPERATE OFF.
- The TALLY SYSTEM menu may not display depending on the GY-HD250/251 software version. In that case, please consult your JVC dealer.

Item	Function/Setting (bold characters indicate initial settings)
TALLY SYSTEM	Select the FRONT TALLY, BACK TALLY light up information. STUDIO: The FRONT TALLY and BACK TALLY lamps blink when CALL is received from the remote control. CALL also blinks in red on the LCD/VF screen. The FRONT TALLY and BACK TALLY lamps light up when TALLY PROGRAM is received from the remote control. PGM also appears in red on the LCD/VF screen. The BACK TALLY lamp lights up when TALLY PREVIEW is received from the remote control. PVW also appears in green on the LCD/VF screen. TAPE: The TAPE recording status is indicated by the TALLY lamps depending on the FRONT TALLY and BACK TALLY settings on the OTHERS [1/2] menu. TAPE+HDD: The TAPE recording status and the recording status of DR-HD100, which is connected to the camera, are indicated by the TALLY lamps. <ul style="list-style-type: none">• For TAPE recording only, both FRONT TALLY and BACK TALLY lamps light up.• For DR-HD100 recording only, both FRONT TALLY and BACK TALLY lamps blink twice at 1 second interval.• For TAPE and DR-HD100 recording, both FRONT TALLY and BACK TALLY lamps blink at 0.5 second interval.

For other items, please refer to the INSTRUCTIONS