

JVC

EN

Maintenance after Use

After using underwater or in dusty places, rinse the camera with water immediately and dry it completely.

- 1 Ensure that the terminal cover is closed.
- 2 Rinse with clean water.

Soak the camera in a container filled with enough water to immerse the camera completely, and rinse it gently.

- After using the camera under the sea or on the beach, immerse the camera in fresh water for about 10 minutes to remove salt particles, replace the water and rinse the camera.

- Open and close the LCD screen, and operate the buttons or zoom operations to get rid of sands or dusts in the gap.



- 3 Dry the camera.

Wipe the camera completely with a soft dry cloth and allow it to dry in a well-ventilated and shady location.

- Place the camera with the lens facing downward while the LCD monitor is closed, and leave it for approximately 10 minutes. (By doing so, microphone and LDC part are dried out easily.) Place the camera in a up right position on a dry cloth afterward Close the terminal cover after the camera is dried out completely.

- Wipe off any foreign materials or water droplets inside the cover.

- * If you leave the camera immersed in salt water or allow water droplets from the salt water to remain on the camera, this may cause corrosion, discoloration or deterioration of waterproof performance.
- * If you wipe or dry the camera with sand particles adhered, this may cause scratches on the camera.
- * Do not wash with chemicals, soap, neutral detergents, or alcohol.
- * Do not dry the camera with a hair dryer or other heat sources. This could impair its waterproof performance.

C5B

B5H-0097-00
1215TOH-SW-MT



CS

使用后的维护

在于水下或灰尘较多的地方使用以后，请立即用水冲洗摄像机并彻底擦干。

- 1 请确保端子盖盖紧。
- 2 请使用清水冲洗。

将摄像机浸泡在装足够水的容器中以完全浸没摄像机，然后轻轻冲洗。

- 在于海中或沙滩上使用摄像机以后，请在淡水中浸泡摄像机约 10 分钟以去除盐颗粒，然后更换水并冲洗摄像机。
- 打开并关上液晶监视器，并且操作按键或变焦操作以去除空隙间的沙子或灰尘。



- 3 擦干摄像机。

用柔软的干布彻底擦拭摄像机，并且让其在通风良好和阴凉的地方进行干燥。

- 在液晶监视器关闭时，将摄像机镜头向下放置，并放置大约 10 分钟。（这样做，话筒和 LDC 部件可以很容易地晾干。）在摄像机完全晾干后，将摄像机朝右上方方向放置在干布上后关闭端子盖。
- 擦去盖子里任何的异物或水滴。

- * 如果您把摄像机浸泡在盐水里，或者让盐水的水滴留在摄像机上，这可能会导致腐蚀、变色或防水性能的劣化。
- * 如果您擦拭或擦干摄像机时上面有沙粒附着，这可能会导致摄像机上的划痕。
- * 请勿使用化学品、肥皂、中性清洁剂或酒精进行清洗。
- * 请勿使用吹风机或其他热源干燥摄像机。这会严重影响其防水性能。

CT

使用後的保養


在水下或灰塵較大的地方使用後，請立即用水沖洗攝影機並將其完全晾乾。

1 請確保端子蓋關閉。

2 使用清水沖洗。

將攝影機浸泡在裝滿足夠水的容器內以完全浸入攝影機，並輕輕沖洗。

- 在海水下或海灘上使用攝影機後，將攝影機浸入淡水中約 10 分鐘以除去鹽粒，然後更換水並沖洗攝影機。
- 打開並關閉 LCD 螢幕，並操作按鈕或變焦操作以去除空隙中的砂礫或灰塵。

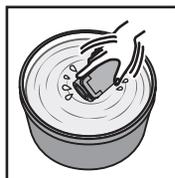

3 晾乾攝影機。

使用柔軟的乾布徹底擦拭攝影機，並讓其在通風良好且陰涼的地方晾乾。

- 在 LCD 螢幕關閉的情況下，將攝影機以鏡頭朝下放置大約 10 分鐘。（這樣做，麥克風和 LDC 零件會容易晾乾。）在攝影機徹底晾乾後，關閉端子蓋以後，將攝影機以直立位置放置在乾布上。
- 擦去蓋子內的任何異物或水滴。

*如果您將攝影機浸入海水或將海水水滴遺留在攝影機上，可能會導致腐蝕、變色或防水效能的劣化。

*如果您擦拭或乾燥附著有砂礫的攝影機，可能會導致攝影機的劃痕。

*請勿使用化學品、肥皂、中性清潔劑或酒精清洗。

*請勿使用吹風機或其他熱源乾燥攝影機。這會削弱其防水效能。